



EASY BREEZY
PORCH SWINGS

Assembly Instructions

PorchCraft Classic Swing Bed



 
Thank you for choosing Easy Breezy Porch Swings

For help with assembling your furniture, or if you
have missing hardware, please email us at
support@easybreezyporchswings.com

PARTS

(included) Side

- (A) Rails (2)
- (B) Back Rails (2)
- (C) End Rails (6)
- (D) Back Posts (2)
- (E) Front Posts (2)
- (F) Slat Roll (1)

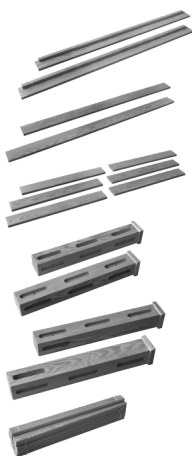

HARDWARE

- (a) 3 1/2" Bolts (20)
- (b) 1 3/4" Screws (26)
- (c) Eyebolts (4)
- (d) Allen Wrench (1)
- (e) Square Drive Bit (1)
- (f) Ropes or Chains (4)



TOOLS NEEDED

Screwgun

STEP 1

Attach the end rails to the posts. (Note: There are left & right posts. Make sure the posts are in the right corners before fastening.) Insert the bolts through the post and screw into the metal inserts in the end rails. (See photos 1, 2, 3 & 4.)

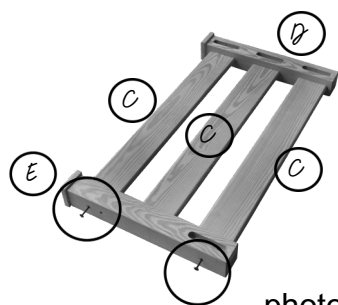 


photo 1

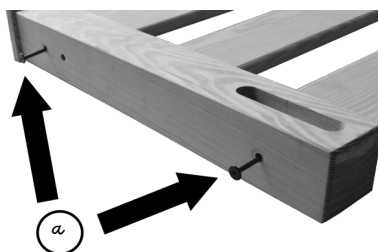 


photo 2

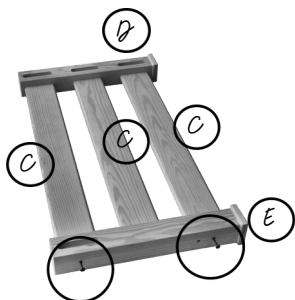 


photo 3

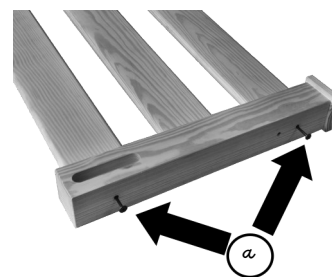 


photo 4

STEP 2

Attach the back rails & one side rail to the back posts. (See photos 5 & 6.) The side rail with the extra strip goes in the bottom notch & the back rails in the middle & top notch.

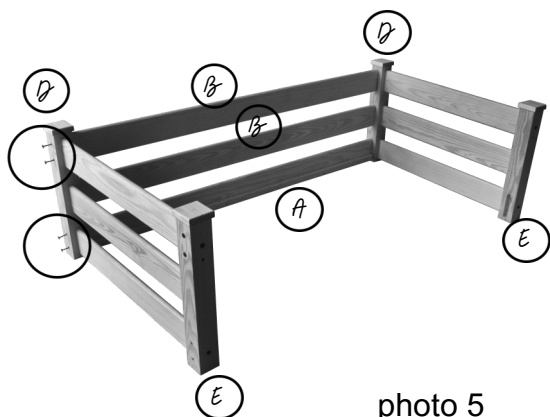 


photo 5

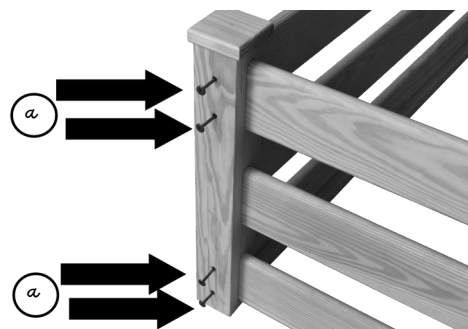 


photo 6

STEP 3

Attach the other side rail to the front posts as shown in photos 7 & 8. Insert the eyebolts in the extra holes in the posts & hand screw them into the metal inserts in the posts. (See photos 7 & 8.)

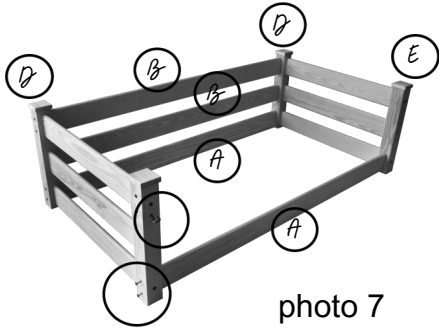 


photo 7

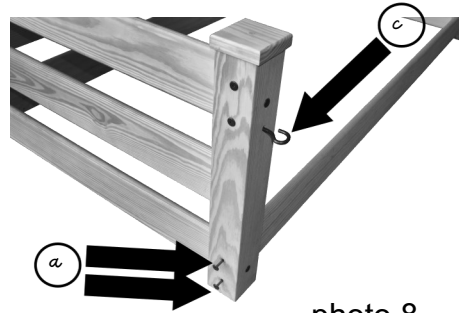 


photo 8

STEP 4

Cut the wrap on the slat roll and unroll them onto the bed frame with the string facing up. (See photo 9.) Fasten each slat at both ends to the side rails with $1\frac{3}{4}$ " screws keeping the string taut as you go along. (See photos 10 & 11.) Use your power drill or screwgun to drive the screws with the included square drive bit. Note: The screws are self drilling. You shouldn't need to predrill, however, doing so will make them easier to drive. Use drill bit no larger than $\frac{7}{64}$ ".

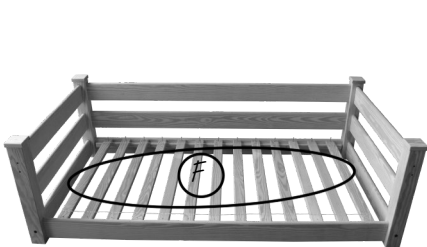 


photo 9



photo 10

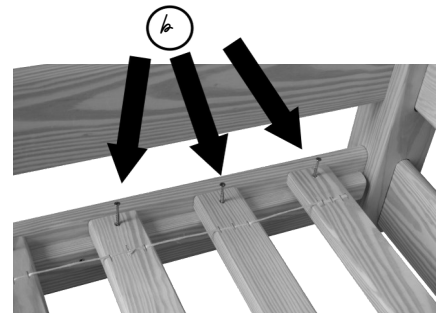 


photo 11

STEP 5

If you are attaching ropes, thread the end of one of the ropes through each eyebolt from the top. (See photo 12.) Make a knot in the end of the rope below the eyebolt. (See photos 13, 14 & 15.) Pull the knot up against the eyebolt. (See photo 16.) If you are attaching chain, hook the chain into the eyebolts before fully tightening them.



photo 12

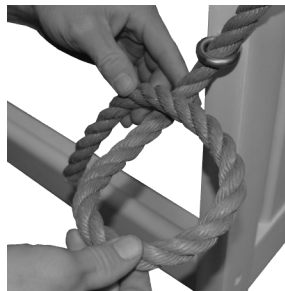 


photo 13



photo 14

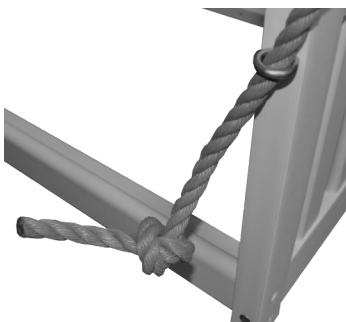 
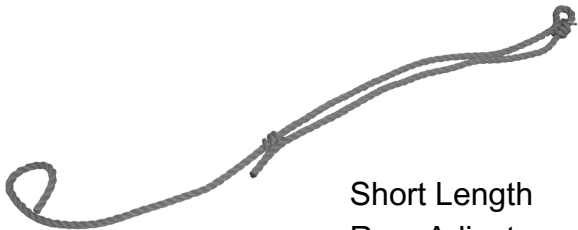 


photo 15

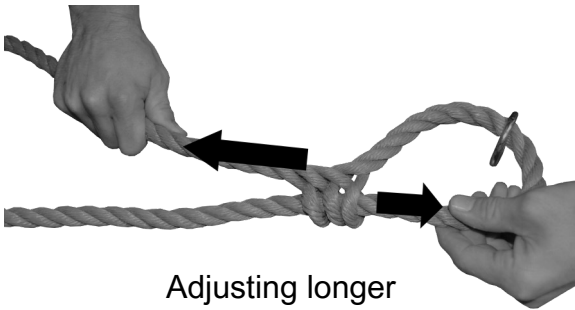 


photo 16

 
 
 
The rope can also be adjusted to make the swing hang a little higher or lower. (See series of photos below.) Note: You will receive the ropes adjusted short in length. The photos show the ropes being adjusted long in length.




Short Length
Rope Adjustment



Adjusting longer

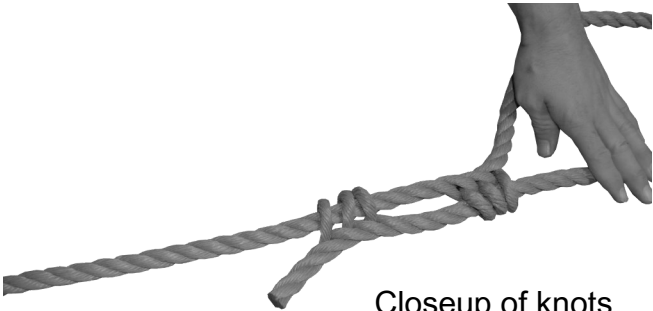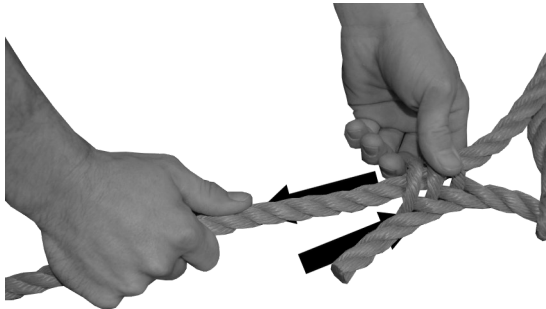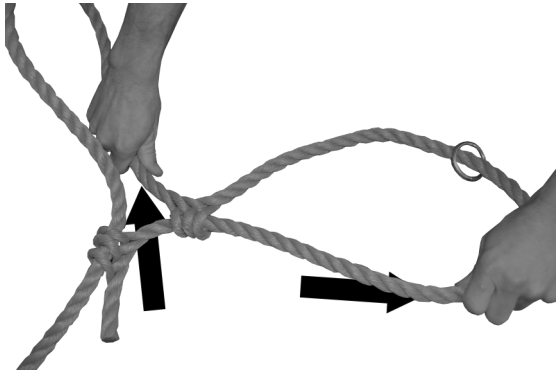

Closeup of knots

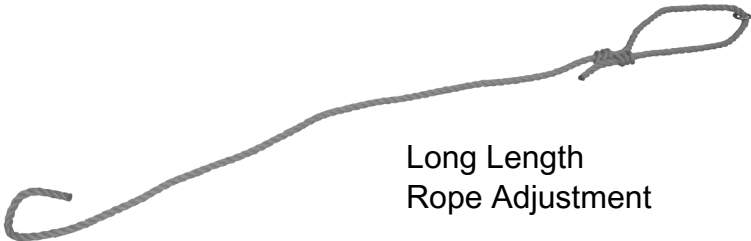 

Long Length
Rope Adjustment