## PARTS (included)

- (A) Headboard Assembly (2)
- (B) Back Assembly (1)
- (C) Side Rail (1)
- (D) Mattress Board (8)

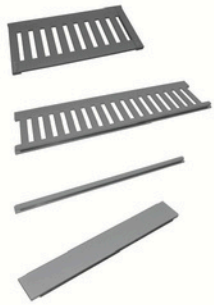

## HARDWARE (included)

- (a) ¼" x 2¾" Bolt (12)
- (b) 2" Screws (32)
- (c) Eyebolt (4)
- (d) Allen Wrench (1)
- (e) Square Drive Bit (1)
- (f) Rope (4)



## TOOLS NEEDED

Screw Gun

## STEP 1

Attach the headboards to the back assembly on each side using the 2¾" bolts. (See photos 1 & 2.) Use the included Allen wrench to tighten. Note: Do not fully tighten any bolts until all are started.

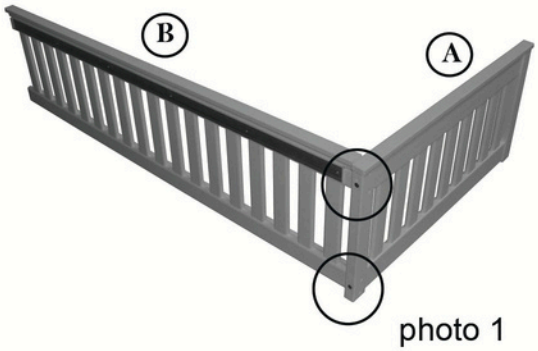


photo 1

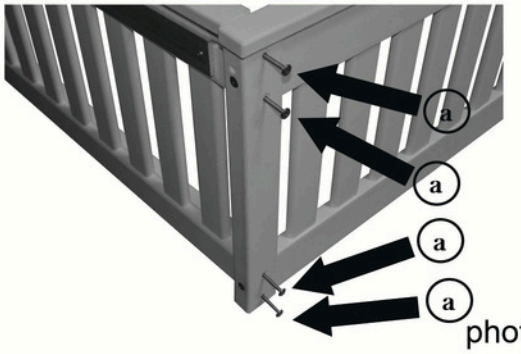


photo 2

## STEP 2

Attach the side rail to the headboards at the front using 2¾" bolts. (See photos 3 & 4.) Note: Do not fully tighten any bolts until all are started.

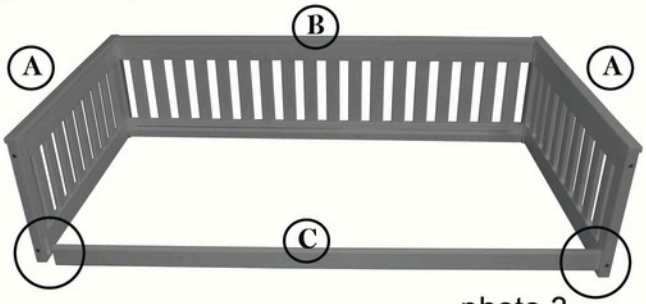


photo 3

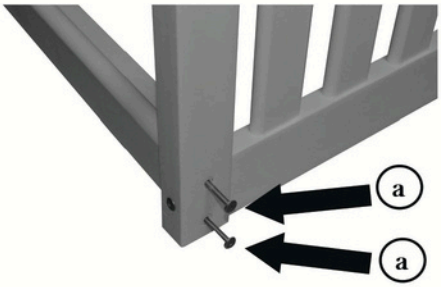


photo 4

## STEP 3

Attach the mattress boards to the inside bottom of the frame using the 2" screws. (See photos 5 & 6.) You will need to use the included square drive bit with your screwgun. Space the boards as evenly as possible.

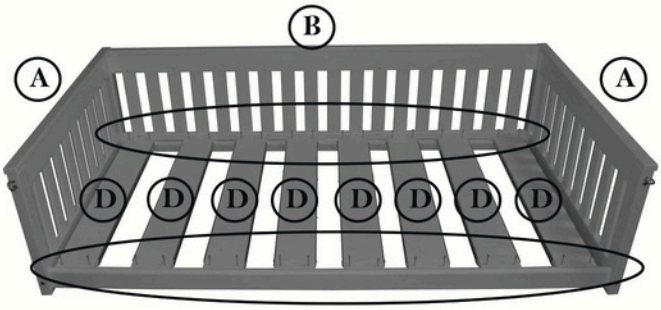


photo 5

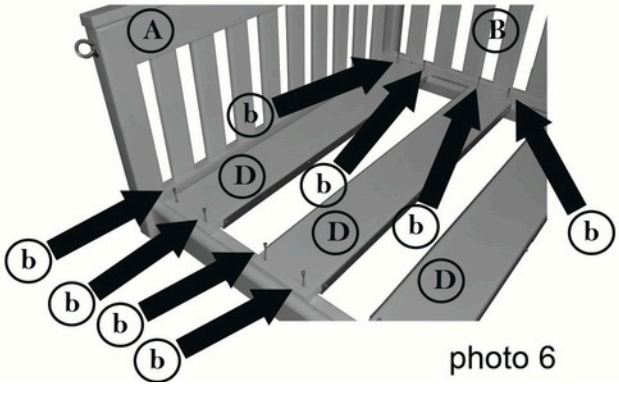


photo 6

## STEP 4

Screw the eyebolts into the headboards towards the top. (See photos 7 & 8.) You will need to do this at the front and back of the bed. Screw them in as tight as you can.

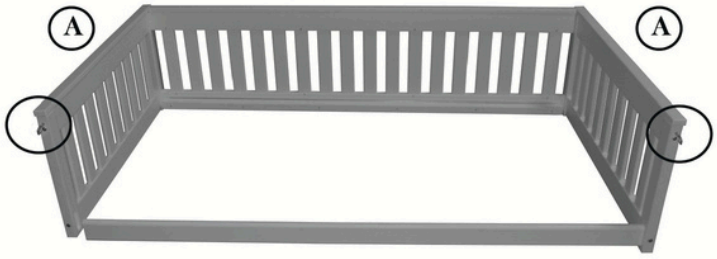


photo 7

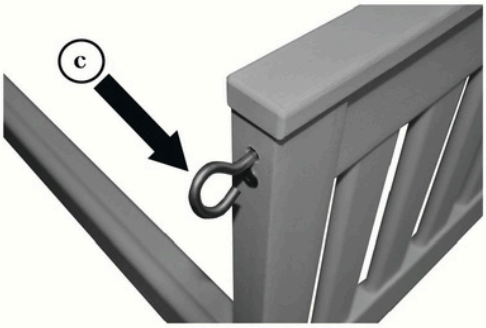


photo 8

## STEP 5

Thread the end of one of the ropes through each eyebolt from the top. (See photo 9.) Make a knot in the end of the rope below the eyebolt. (See photos 10, 11 & 12.) Pull the knot up against the eyebolt. (See photo 13.)



photo 9



photo 10



photo 11



photo 12



photo 13

The rope can also be adjusted to make the swing hang a little higher or lower. (See series of photos below.) Note: You will receive the ropes adjusted short in length. The photos show the ropes being adjusted long in length.



Short Length
Rope Adjustment

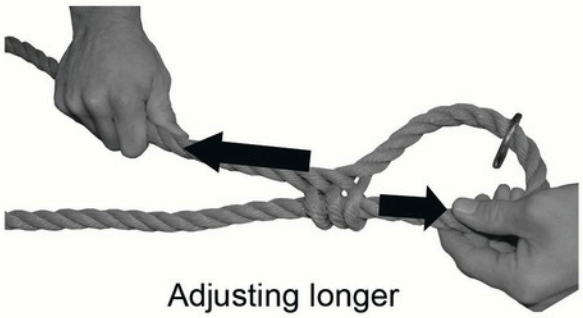

Adjusting longer

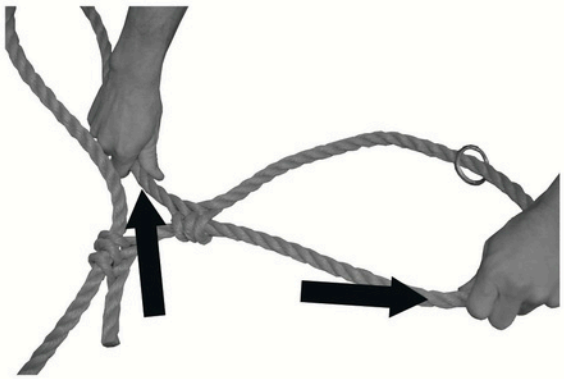

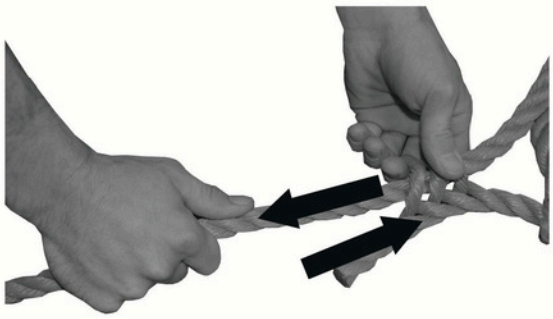



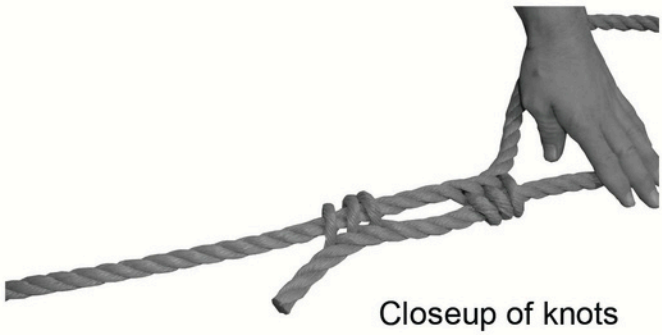

Closeup of knots



Long Length
Rope Adjustment