



EASY BREEZY
PORCH SWINGS

VersaLoft Mission Hanging Daybed




**For help assembling your furniture, or if you
have missing hardware,
please email us at
support@easybreezyporchswings.com**

or call us at 888-495-3792

PARTS (included)

- Ⓐ Headboards (2)
- Ⓑ Backrest (1)
- Ⓒ Front Rail (1)
- Ⓓ Mattress Boards (7)

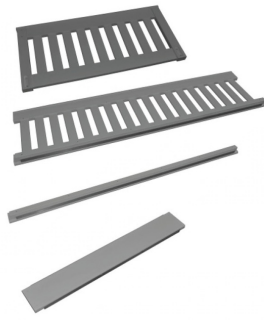

HARDWARE (included)

- ⓐ 4" Eyebolts (4)
- ⓑ 2¾" Bolts (12)
- ⓒ 1¾" Screws (30)
- ⓓ Allen Wrench (1)
- ⓔ Square Drive Bit (1)
- ⓕ Chains or Ropes (4)



TOOLS NEEDED

Power Screwdriver

STEP 1

Attach the backrest to the back posts. Place the bottom rail in the notches in the inside of the posts. Insert four 2¾" bolts through the top and bottom holes in the posts. Turn the bolts into the threaded inserts in the backrest & tighten with the Allen wrench. (See photo 1.)

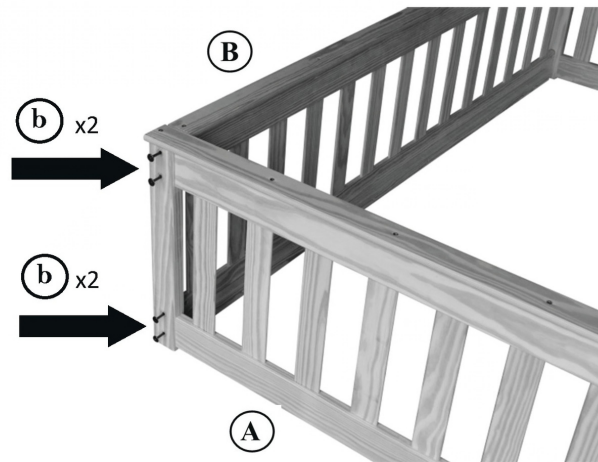


photo 1

STEP 2

Place the front rail in the notches in the front posts. Turn two 2¾" bolts into the threaded inserts & tighten with the Allen wrench. (See photo 2.)

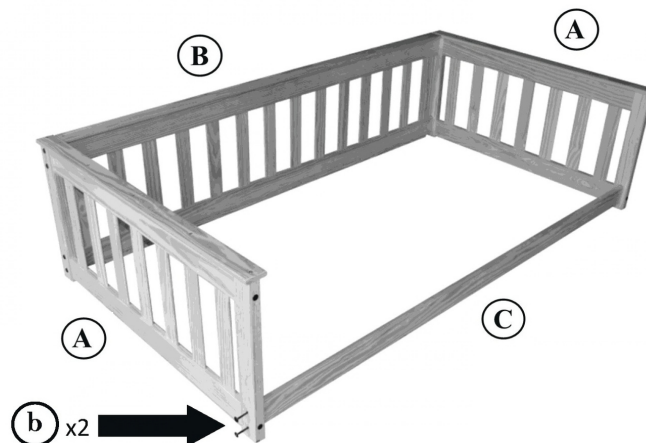


photo 2

STEP 3

Place the mattress boards in the frame and space them evenly. Fasten with 1 $\frac{3}{4}$ " screws, 4 screws per board. (See photos 3 & 4.)

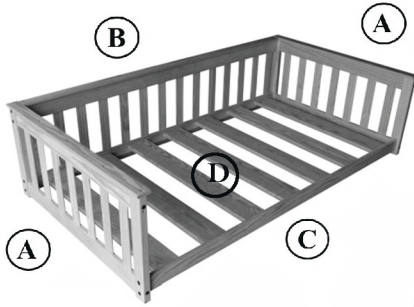


photo 3

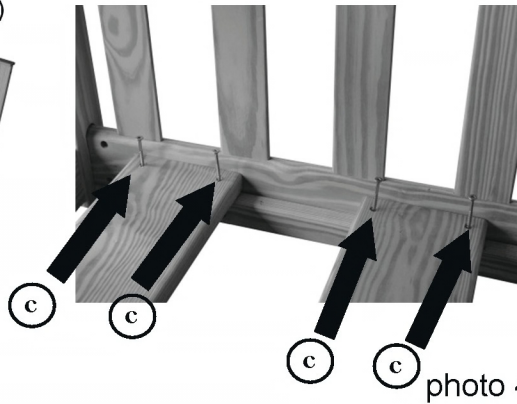


photo 4



photo 5

STEP 4

Find the 4 holes in the front and back posts close to the top. Insert the 4" eyebolts & turn into the inserts. (See photo 5). If you are attaching chain, hook the chain into the eyebolts before fully tightening them.

STEP 5

If you are attaching ropes, thread the end of one of the ropes through each eyebolt from the top. (See photo 6.) Make a knot in the end of the rope below the eyebolt. (See photos 7, 8 & 9.) Pull the knot up against the eyebolt. (See photo 10.)



photo 6



photo 7



photo 8

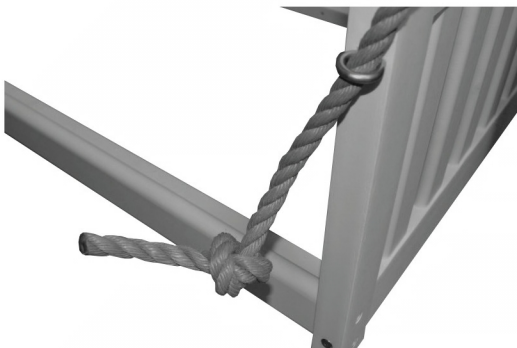


photo 9



photo 10

The rope can also be adjusted to make the swing hang a little higher or lower. (See series of photos below.)
Note: You will receive the ropes adjusted short in length. The photos show the ropes being adjusted long in length.

